



CONSTRUCTION INDUSTRY COUNCIL

建造業議會

REFERENCE MATERIALS ON CONNECTING COPPER PIPES



Version 1
March 2017

Disclaimer

Whilst reasonable efforts have been made to ensure the accuracy of the information contained in this publication, the Construction Industry Council nevertheless would encourage readers to seek appropriate independent advice from their professional advisers where possible and readers should not treat or rely on this publication as a substitute for such professional advice for taking any relevant actions.

© Copyright 2017 Construction Industry Council. All Rights Reserved.

REFERENCE MATERIALS ON CONNECTING COPPER PIPES

Preface


The Construction Industry Council (CIC) is committed to seeking continuous improvement in all aspects of the construction industry in Hong Kong. To achieve this aim, the CIC forms Committees, Task Forces and other forums to review specific areas of work with the intention of producing Alerts, Reference Materials, Guidelines and Codes of Conduct to assist participants in the industry to strive for excellence.

Reference Materials for adopting standards or methodologies in such ways that are generally regarded by the industry as good practices. The CIC recommends the adoption of these Reference Materials by industry stakeholders where appropriate.


It is recommended that all plumbing practitioners when carrying out soldering should consider the safe and reliable installation of the drinking water system, and follow the relevant British Standard and European Norm in selection of materials. Relevant materials should have General Acceptance (G.A.) issued by the Water Supplies Department.



- ① A copper tube with insulation (above) and a copper tube without insulation (below)

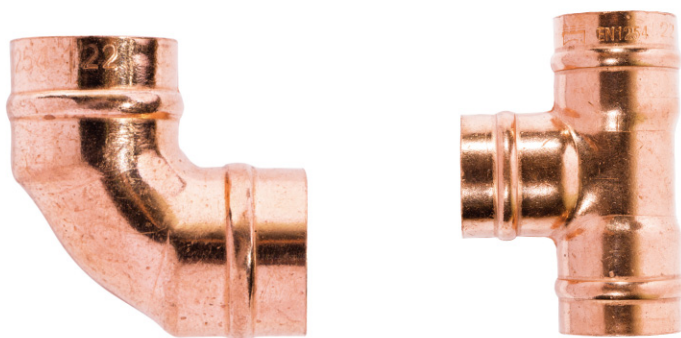

- ② Integral ring soft solder fittings - no addition of solder wire will be required during installation

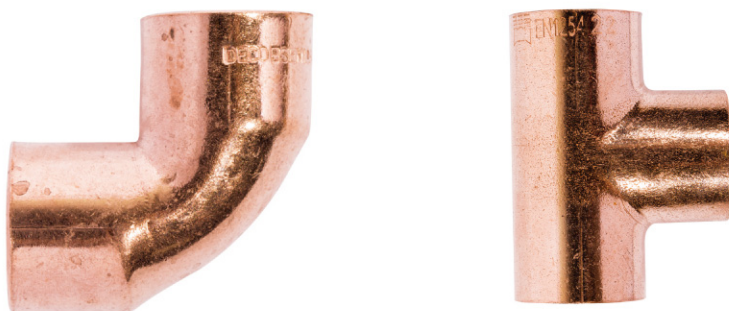

- ② Capillary fittings - addition of solder wire will be required during installation

1. Use copper tube that complies with BS EN 1057 specification under British Standard and European Norm.

2. Copper tube installation – Fittings

Copper tube fittings must comply with BS EN 1254 specification. It is recommended to use integral ring soft solder fittings because no solder wire is needed.

3. Copper tube installation - Copper tube soldering materials

- (A) Flux (commonly known as resin) must not contain ammonia.



▲ Ammonia-free flux (resin)

- (B) Solder wire used in soft soldering must be lead-free and complies with BS EN ISO 9453 specification.



▲ Lead-free solder wire

Step

1

4. Steps for copper tube installation - Soldering

Step 1

Use a cutter or hand saw to cut the tube into the desired length and ensure that it is cut at right angle. Use a reamer or a fine file to remove burrs in the tube.

Step 2

Carefully inspect all fittings for defect or damage before installation. Clean the end surface of the tube and the internal jointing part of the fitting with steel cotton or emery cloth to ensure that no oxide remains at the jointing surface.

Step 3



Use a clean brush to smear flux (commonly known as resin) evenly onto the end surface of the tube and the whole internal surface of the fitting. Fit the fitting completely into the end of the tube to prepare for soldering. Remove any excessive flux by a clean cloth.


Step

2

Step

3

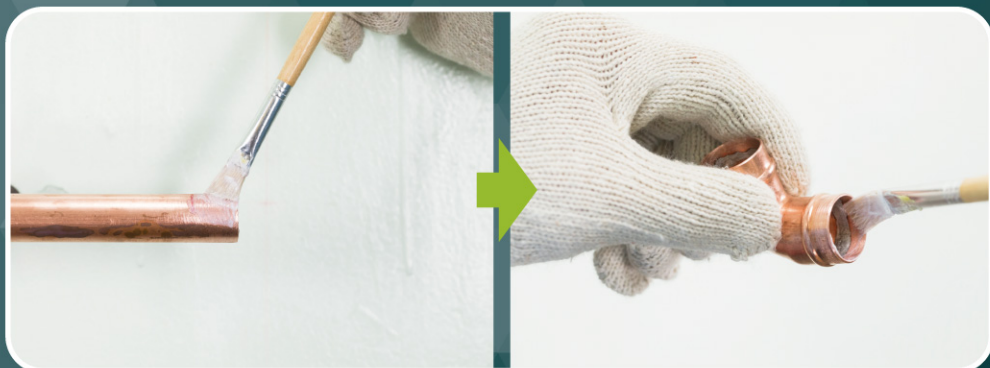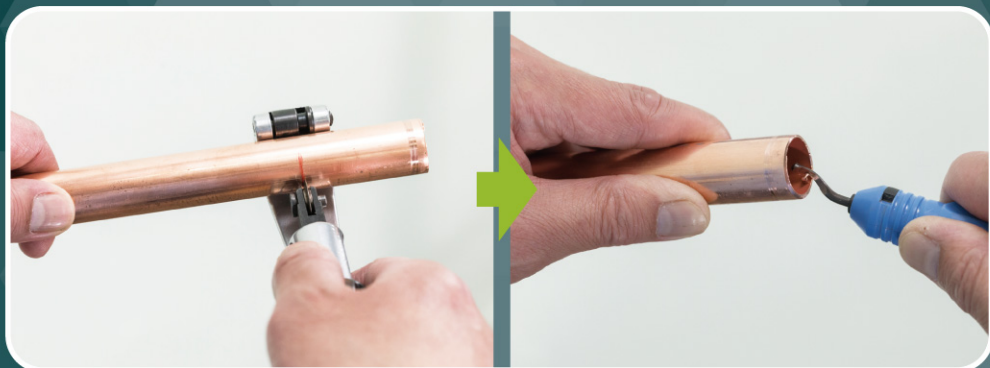

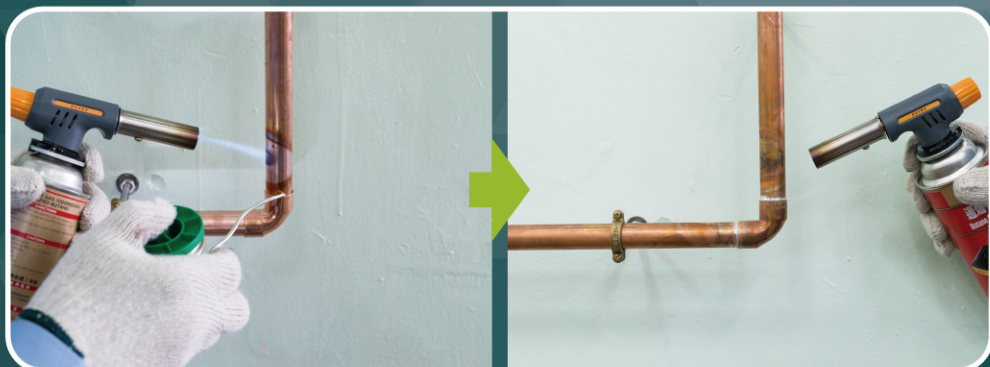

Step 4A

Step 4

Tube and fitting should be properly assembled and supported before heating. Heat the tube and fitting to a right temperature with a blowburner.

(A) Integral ring soft solder fittings

No extra solder is needed. Stop heating when the joint is properly heated and solder melted and flowed to the edge of the joint.

Step 4B

(B) Capillary fittings

Move the soldering material (lead-free solder wire) to the joint and melt it. The soldering material permeates into the joint through capillarity. Stop heating when the joint is fully-filled.

Step 5

After removing from flames, the soldering material will turn from a shiny liquid state into a matte solid state after cooling down. Clean the remaining flux by a wet towel.

Step 5

5. Use swabs for instant test to examine whether the material at the joint contains any lead after completion of soldering.



Related Standard:

Information about water supply pipes and fittings with valid General Acceptance ("G.A.") from the Water Supplies Department is available at the following website:
http://www.wsd.gov.hk/en/plumbing_and_engineering/fittings_install_in_inside_services/index.html

BS EN 1057:2006

Copper and copper alloys - Seamless, round copper tubes for water and gas in sanitary and heating applications

BS EN 1254-1:1998

Copper and copper alloys - Plumbing fittings. Fittings with ends for capillary soldering or capillary brazing to copper tubes

BS EN ISO 9453:2014

Soft solder alloys. Chemical compositions and forms

Construction Industry Council

38/F, COS Centre

56 Tsun Yip Street

Kwun Tong

Kowloon

Tel. : 2100 9000

Fax. : 2100 9090

Email : enquiry@cic.hk

Website : www.cic.hk